

## EXAMPLE 15

# Split Flow Junction with Lateral Weir/Spillway

## Purpose

This example demonstrates the use of HEC-RAS to optimize two different split flow problems: a lateral weir with gated spillway and a looped network. In both situations, the program uses an iterative procedure to compute the flows and energies at a given point (either the lateral weir or the upstream junction of the looped network).

To perform the analysis, the user must enter the geometric data for the lateral weir and gates, along with the geometry of the river reach system. Then, the user must enter the opening height of each gate group for each flow profile in the **Steady Flow Editor**. Finally, the user should set the split flow optimization flag (to perform the iterative procedure) for the lateral weir and for the junction at the upstream end of the looped network. The modeler is referred to Chapter 6 of the **User's Manual** for discussion on entering the geometric data for the weir and gated spillways and junctions and multiple reaches, Chapter 7 of the **User's Manual** for entering the gate opening flow data, and Chapter 8 of the **Hydraulic Reference Manual** for the hydraulic analysis procedures for analyzing the flow through the gate openings and over the weir.

To review the data files for this example, from the main program window select **File** and then **Open Project**. Select the project labeled "Split Flow Junction with Lateral Weir - Example 15." This will open the project and activate the following files:

Plan:	"Split Flow"
Geometry:	"Lateral Weir with Full Looped Network"
Flow:	"3 Flow Profiles"

## Geometric Data

To view the geometric data for the river system, from the main program window select **Edit** and then **Geometric Data**. This will activate the **Geometric Data Editor** and display the river system schematic as shown in Figure 15.1. The schematic displays the 24 river stations of the rivers "Spruce Creek" and "Bryon Creek," with river station 1278 as the upstream cross section and 0 as the downstream cross section.


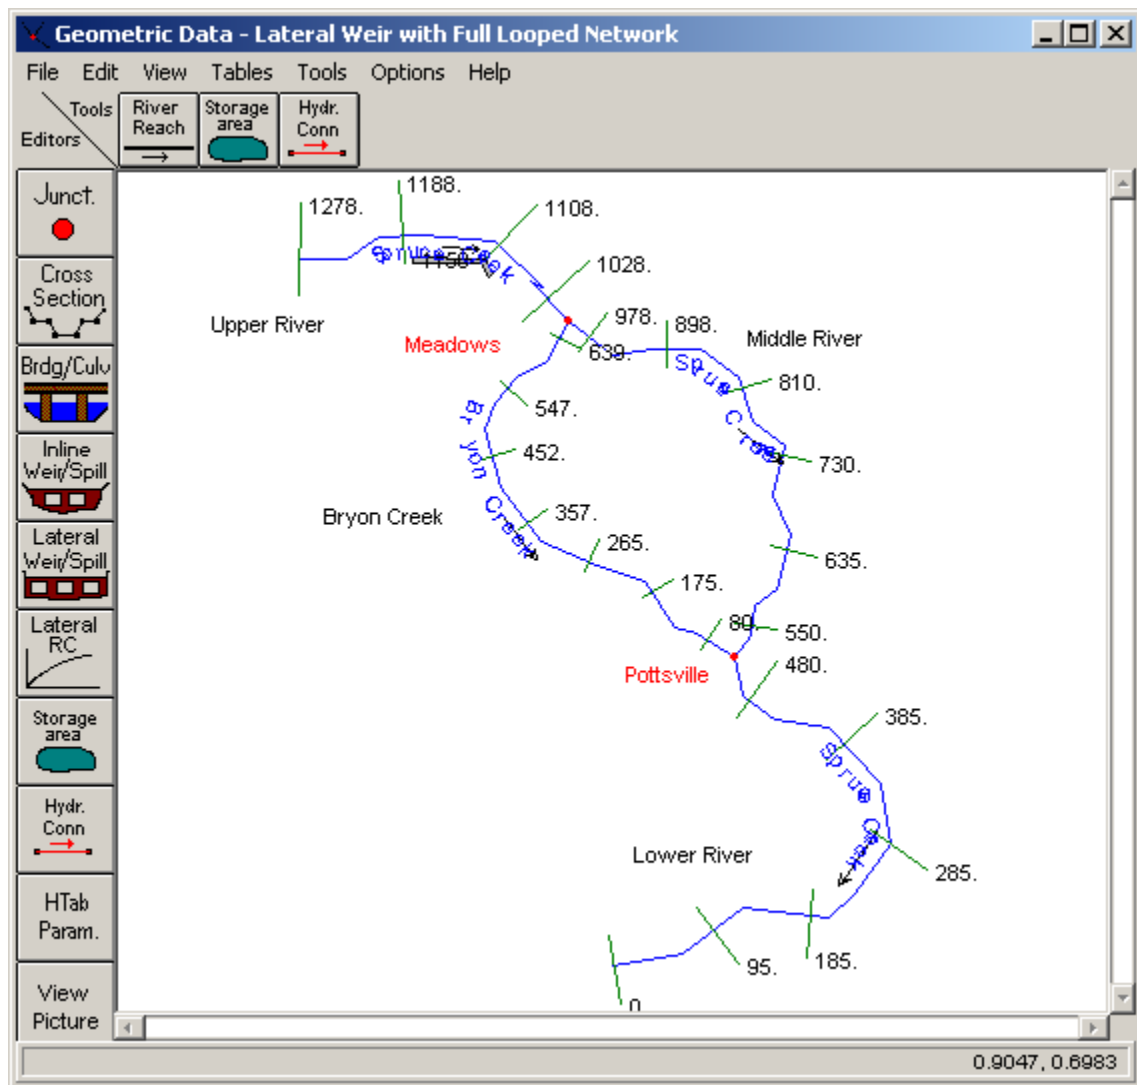


Figure 15.1 River System Schematic for Split Flow Example

## Stream Junction Data

There are four different river reaches in the river system schematic. Spruce Creek is divided into three different reaches: Upper River, Middle River, and Lower River. Bryon Creek is the fourth reach. Bryon Creek and Middle River, together form a closed loop between the Meadows river junction and the Pottsville river junction. The junction editor for the Meadows river junction is shown in Figure 15.2 Meadows is the upstream junction. This is where the flow splits into the two different rivers. This will be discussed in more detail later.

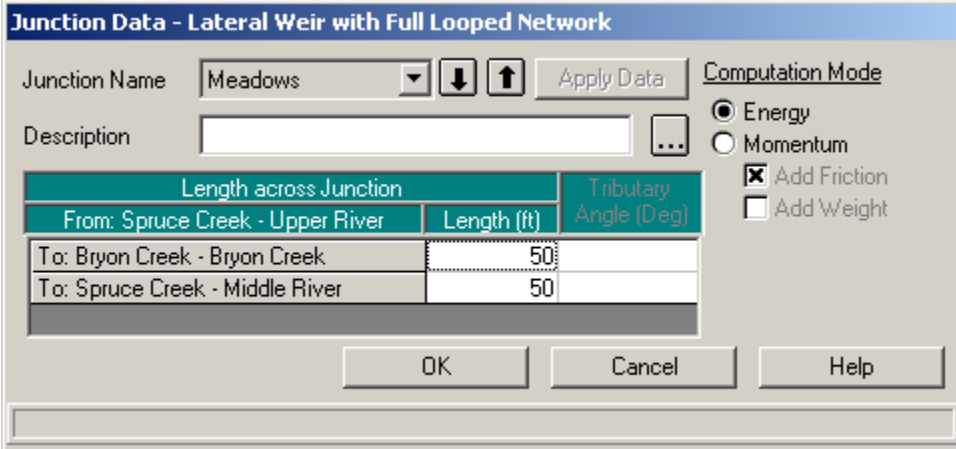

**Junction Data - Lateral Weir with Full Looped Network**

Junction Name: Meadows [Dropdown] [Up/Down Arrows] [Apply Data]

Description: [Text Field] [Ellipsis]

Computation Mode:  
☒ Energy  
☐ Momentum  
☒ Add Friction  
☐ Add Weight


Length across Junction		Tributary Angle (Deg)
From: Spruce Creek - Upper River	Length (ft)	
To: Bryon Creek - Bryon Creek	50	
To: Spruce Creek - Middle River	50	

OK Cancel Help

Figure 15.2 Meadows Junction

## Cross Section Data

The cross section data consists of the X-Y coordinates, Manning's  $n$  values, contraction and expansion coefficients, etc. The user can view this data for each river station by selecting the **Cross Section** icon on the left side of the **Geometric Data Editor**. For this example, a lateral weir was added at river station 1150 and will be discussed in the next section. Figure 15.3 displays the reach lengths in the vicinity of the weir and was activated by selecting **Tables** and then **Reach Lengths** from the **Geometric Data Editor**.

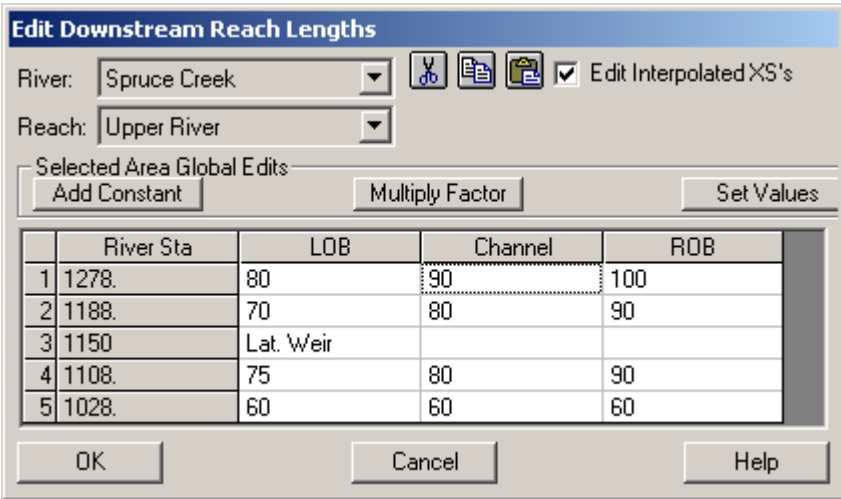

**Edit Downstream Reach Lengths**

River: Spruce Creek [Dropdown] [Copy] [Paste] [Print] [Edit Interpolated XS's] ☒

Reach: Upper River [Dropdown]

Selected Area Global Edits:


	River Sta	LOB	Channel	ROB
1	1278.	80	90	100
2	1188.	70	80	90
3	1150	Lat. Weir		
4	1108.	75	80	90
5	1028.	60	60	60

OK Cancel Help

Figure 15.3 Reach Lengths in Upper River

## Lateral Weir

To add a lateral weir, the **Lateral Weir and Spillway** icon was selected from the left side of the **Geometric Data Editor**. This activated the **Lateral Weir Data Editor** as shown in Figure 15.4. First, the river “Spruce Creek” and the reach “Upper River” were selected. Then, **Add a Lateral Weir** was selected from the **Options** menu, and river station 1150 was entered as the location for the weir. By entering the river station, the upstream end of the lateral weir is automatically placed between the cross section with the next highest river station upstream and the next lowest river station downstream. The schematic will display a profile plot of the lateral weir and any gates. When the lateral weir is first added, the schematic will be blank because the data have not yet been entered. For this example, a description of the weir was entered as “Lateral Weir and Spillway in Upper River.” Underneath the description box, is the *Position* box. By clicking on the down arrow, the modeler can choose to place the lateral weir in the right or left overbank, or the right or left side of the channel. For this problem, the weir has been placed in the right overbank.

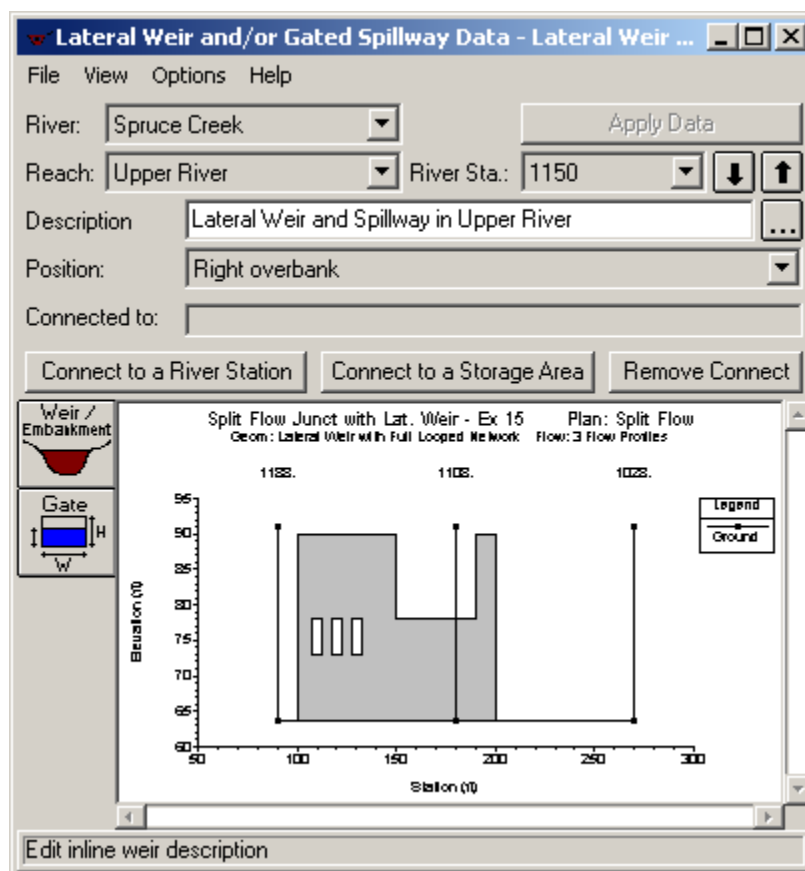

**Figure 15.4 Lateral Weir Data Editor**

To enter the data for the weir, the **Weir/Embankment** icon was selected from the left side of the **Lateral Weir Data Editor**. This activated the **Lateral Weir Embankment Editor** as shown in Figure 15.5. This editor is somewhat similar to the deck/roadway editor used for bridges and culverts.

Weir Station and Elevation		
	Station	Elevation
1	100	90
2	150	90
3	150	78
4	190	78
5	190	90
6	200	90
7		
8		
9		
10		
11		

**Figure 15.5 Later Weir Embankment Editor**

The right side of the editor has two columns for the station and elevation data. These data points define the top of the lateral weir and they are entered in the upstream to the downstream direction. Similar to cross section data, the stationing for the data can be based on any horizontal datum. In this example, the weir starts at an elevation of 90 feet at an arbitrary horizontal station of 100 feet. Fifty feet downstream, the weir drops to an elevation of 78 feet. After forty feet, it returns to an elevation of 90 feet at station 190. The weir continues at an elevation of 90 feet until the final station of 200.

The left side of the editor has four fields. The top field is the *Distance to Upstream Cross Section*. The upstream cross section is the first normal cross section immediately upstream of the lateral weir based on river stationing. (Between two normal river cross sections, there can be two or more lateral weirs.) In this example, the upstream cross section is 1188 and the upstream end of the lateral weir is 10 feet from this cross section. So the *Distance* has been entered as 10 feet. The program will compute the distances to downstream cross sections based on where the lateral weir is located. In this example, the *Position* of the lateral weir has been specified as the right overbank (see above). This means that the program will use the right overbank reach lengths. The right overbank length (between cross sections 1188 and 1108) is 90 feet. Therefore, the lateral weir intersects the downstream cross section (river station 1108) twenty feet from the downstream end of the lateral weir.

It should be noted that the lateral weir cannot cross more than eight cross sections. If this happens, the user should either increase the cross section spacing (so that there are only eight cross sections that the weir actually crosses), or alternately, the user can break the lateral weir into two or more weirs that are physically adjacent. The latter option would generally be

preferred. However, breaking the lateral weir into two or more weirs might cause the program to take longer to converge during the iterative process.

The next field down is the *Weir Width*. This is width of the weir in the direction of flow over the weir (perpendicular to the flow in the river cross section). It is not used for hydraulic computations, but is used by the GUI for graphical purposes. In this example, it has been set to 10 feet.

The next lower field is *Weir Flow Reference*. By left clicking on the down arrow, the modeler can toggle between “Energy Grade” and “Water Surface.” Based on this switch, the program will compute the flow over the weir (and through any gates), using either the energy grade or the water surface when calculating the head (i.e. the depth of flow) on the weir. In this example, since the lateral weir is located in the overbank, the energy method was selected.

The bottom field is the *Weir Coefficient* ( $C_d$ ). It is a coefficient that is used in the computation of weir flow. It has been entered as 3.0.

Finally, under *Weir Crest Shape* the user should select either “Broad Crested” or “Ogee” weir. For this example, broad crested has been selected. If the Ogee had been selected, two additional fields and a **! Cd** button would have popped up allowing the user to enter a *Spillway Approach Height* and a *Design Energy Head*. For the Ogee weir, the user can either enter a weir coefficient or have the program compute a weir coefficient by clicking on the **! Cd** button.

## **Gated Spillway**

To enter the data for the gates, the **Gate** icon was selected from the **Lateral Weir Data Editor** (Figure 15.4). This activated the **Gate Editor** as shown in Figure 15.6. For this example, 3 sluice gates were entered. The three gates are always to be opened (or closed) the same amount, so they were defined as a single gate group for ease of operation. If the gates were to be opened or closed individually, then each gate would be defined separately. This will be discussed further when the opening heights are set in the steady flow data editor.

After the **Gate Editor** is activated, the gate data can be entered. The *Height*, *Width*, and *Invert* for the gates were entered as 5, 5, and 73 feet, respectively. On the right side of the editor, the centerline stations for the three gates were entered as shown in Figure 15.6. As these values were entered, the counter field *# Openings* increased to represent the total number of gates (3 for this example). By default, the first, and in this example the only, gate group is labeled as “Gate #1.” This label could have been changed by clicking on the *Rename* button.

Centerline Stations	
	Station
1	110
2	120
3	130
4	
5	
6	
7	

**Figure 15.6 Lateral Gate Editor**

The remaining portion of the editor is divided into two sections, one for the gate data and one for weir data. The gate data are used when the water surface upstream of the gate is greater than 1.25 times the gate opening (as measured from the gate invert). At this water surface elevation, the gate is in contact with the water and is controlling the flow rate. The weir data are used when the upstream water surface is less than or equal to the gate opening. At this water surface elevation, the weir under the gate is controlling the flow through the gate opening (i.e., the water is not in contact with the gate). In between these two elevations, the flow is in a transition zone.

For the gate data, the *Discharge Coefficient* was entered as 0.6. This coefficient is used when the gate is experiencing sluice flow (downstream end of the gate is not submerged). The next field is the *Gate Type*. By selecting the down arrow, the type “Sluice” was chosen. When the gate type was selected, the *Trunnion Exponent*, *Opening Exponent*, and *Head Exponent* values were automatically set to 0.0, 1.0, 0.5 respectively. Since a sluice gate has been selected, the *Trunnion Height* field has been grayed out. The orifice coefficient of 0.8 was entered for full flow conditions (this is used when the tailwater elevation on the gate causes it to be submerged).

For the weir data, the *Shape* was selected as “Broad Crested.” The weir coefficient was left as 3. This information appears in the weir data area at the bottom of the **Gate Editor**.

This completed the data entry for the gates. The **OK** button was selected at the bottom of the **Gate Editor** and the gates appeared on the **Lateral Weir Data Editor** as shown in Figure 15.4. At this point, the user should zoom in on the gate openings to ensure that they do not overlap and appear as intended. The **Lateral Weir Data Editor** was then closed.

## Steady Flow Data

The flow data consisted of three components: the flow rates for each profile; the boundary conditions; and the gate elevation settings. Each of these components are described in the following sections.

### Flow Profiles

To enter the flow data, the **Steady Flow Data Editor** (as shown in Figure 15.7) was activated from the main program window by selecting **Edit** and then **Steady Flow Data**. For this example, the number of flow profiles was selected as 3. When this number was entered, the table in the central portion of the editor expanded to provide three columns for data entry, one for each profile. The table initially created four rows, one for each of the four river reaches (Bryon, Upper, Middle, and Lower Spruce). For each reach, the upstream most cross section is listed under RS (the river station). An initial flow must be given at the upstream end of each reach. An additional flow change was added to the Middle Spruce reach to model a tributary that enters this reach at station 730. (Since the water surfaces and energies in this tributary are not needed, the tributary was not included in the river schematic.) The flow change was added by clicking the appropriate down arrow to select the *River* “Spruce Creek,” *Reach* “Middle River,” and *River Station* “730.”

As shown in Figure 15.7, the flow at the upstream most cross section (RS 1278 in Upper River) is 1500 cfs for the first profile. This 1500 cfs splits at the Meadows junction into reach Middle River and Bryon Creek. The upstream end of Bryon Creek has 1200 cfs. The upstream end of Middle River has the remaining 300 cfs. The program will use the 1200 cfs and the 300 cfs as the initial guess for the flow split at the Meadows junction. For profile 1 at river station 730 (in Middle River) the flow is listed as 350 cfs.

This means that a tributary flow of 50 cfs enters at this point. Even though the final flow in the Middle river will be different after the flow optimization, the program will maintain the 50 cfs addition at this point. This will be discussed more fully under the **Output Analysis** section below. Finally, the flow for the top of the Lower River has been entered as 1550. This represents the 1200 cfs coming from Bryon Creek and the 350 cfs (after the tributary) coming from Middle River.



**Steady Flow Data - 3 Flow Profiles**

File Options Help

Enter/Edit Number of Profiles (500 max):

**Locations of Flow Data Changes**

River:

Reach:  River Sta.:

Flow Change Location			Profile Names and Flow Rates			
	River	Reach	RS	PF#1	PF 2	PF 3
1	Spruce Creek	Upper River	1278.	1500	5000	15000
2	Spruce Creek	Middle River	978.	300	1500	4000
3	Spruce Creek	Middle River	730.	350	1600	4500
4	Spruce Creek	Lower River	480.	1550	5100	15500
5	Bryon Creek	Bryon Creek	639.	1200	3500	11000


Gate Openings

Edit Steady flow data for the profiles (cfs)

Figure 15.7 Steady Flow Data Editor

## Boundary Conditions

After the flow data were entered, the boundary conditions were entered by selecting the **Boundary Conditions** button at the top of the **Steady Flow Data Editor**. This activated the **Boundary Conditions Editor** as shown in Figure 15.8. For this example, a subcritical analysis was performed. Therefore, an external boundary condition was only needed at the downstream most cross section in reach Lower River. The field under *Downstream* was selected and then *Normal Depth* was chosen. A value of  $S = .001$  was entered. Since the *Set boundary for all profiles* has been clicked, the normal slope of 0.001 will be used for all three profiles. The upstream field of Upper River is blank, since this is a subcritical only analysis. All the remaining fields represent internal connections between different reaches and do not require any additional input from the user.

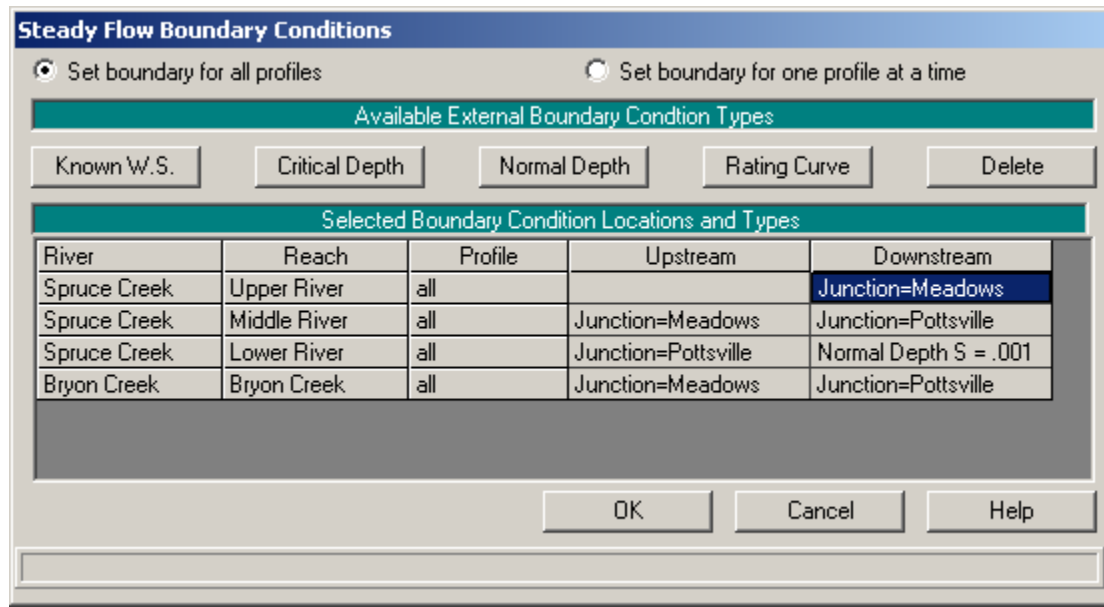

**Steady Flow Boundary Conditions**

☒ Set boundary for all profiles
 ☐ Set boundary for one profile at a time

Available External Boundary Condition Types


Selected Boundary Condition Locations and Types

River	Reach	Profile	Upstream	Downstream
Spruce Creek	Upper River	all		Junction=Meadows
Spruce Creek	Middle River	all	Junction=Meadows	Junction=Pottsville
Spruce Creek	Lower River	all	Junction=Pottsville	Normal Depth S = .001
Bryon Creek	Bryon Creek	all	Junction=Meadows	Junction=Pottsville

Figure 15.8 Boundary Condition Data Editor

## Gate Openings

The final data entry for the analysis was the gate opening heights. To enter this data, from the **Steady Flow Data Editor**, select **Options** and then **Inline/Lateral Spillway Gate Openings**. This activated the **Inline/Lateral Spillway Gate Openings Editor** as shown in Figure 15.9.

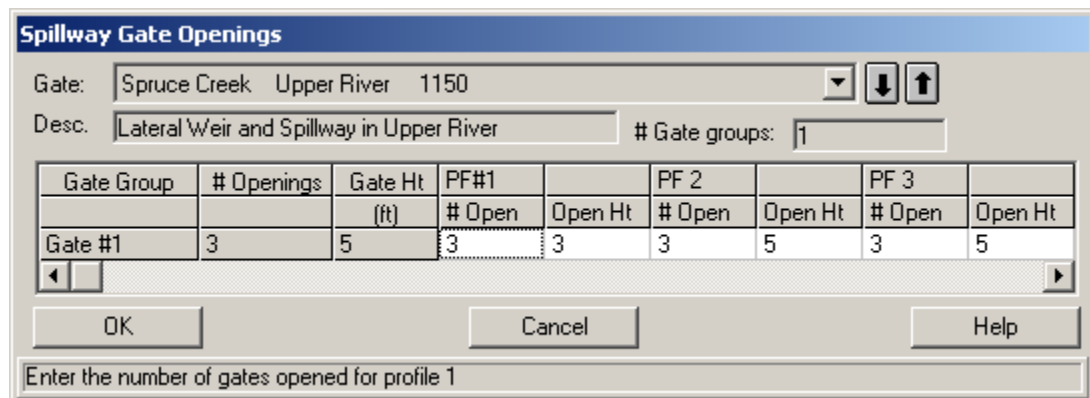

**Spillway Gate Openings**

Gate: Spruce Creek Upper River 1150

Desc: Lateral Weir and Spillway in Upper River # Gate groups: 1

Gate Group	# Openings	Gate Ht (ft)	PF#1 # Open	Open Ht	PF 2 # Open	Open Ht	PF 3 # Open	Open Ht
Gate #1	3	5	3	3	3	5	3	5

Enter the number of gates opened for profile 1

Figure 15.9 Lateral Spillway Gate Data Editor

At the top portion of the editor, the *River* “Spruce Creek,” *Reach* “Upper River” and the *River Station* “1150” were selected. The *Description* is the same as was entered in the **Lateral Spillway Data Editor** (Figure 15.4). The *# Gate Groups* field shows that there is only 1 gate group at this river station. The table in the central portion of the editor has a single row for the one and only gate group. The first column lists the description for the gate group, as it was named in the **Gate Editor** (Figure 15.6). The second column displays

the number of gate openings for the gate group (3). The third column displays the maximum gate height for the gate group (5 feet for this example).

The remaining portion of the editor consists of entry fields for the number of gates opened and the opening heights of the gates for each flow profile. For the Lateral weir, all of the gates in a gate group must be operated together. For this example, for profile 1, the three gates were opened 3 feet. To close the gates, the user could set the number of gates opened to zero, or, alternately, the gate height could have been set to zero. However, if the user enters a non-zero (i.e. positive) number for the number of gates and the gate height, then the program will open all of the gates in the gate group to that height (the field for the number of gates is set up for the Inline weir where it is possible to only open part of the gates in a gate group). This means that if one gate is opened four feet, then all of the gates will be opened four feet. If the user wanted to only open one gate, then that gate would have to be defined as a separate gate group. A Lateral Weir can have a maximum of ten gate groups. So ten gates (or groups of gates) could be operated independently. If more than ten gate groups are needed, the lateral weir could be defined as two or more parts. For instance, a thousand foot long lateral weir could be defined as two 500 foot long lateral weirs. Each “weir” would have to be entered separately with its own river station and data. By choosing the appropriate *Distance to upstream cross section*, the two weirs could be placed immediately adjacent to each other. This would allow for twenty different gate groups to be operated independently.

The user can toggle across the table to view the number of gates open and the gate opening heights for all of the profiles. During the analysis of the output, the various gate settings will be discussed. This concludes the data entry for this example. At this point, the **OK** button at the bottom of the editor was selected and the flow data was saved as “3 Flow Profiles.”

## Steady Flow Analysis

After all of the geometric and flow data had been entered, the **Steady Flow Analysis Window** was activated from the main program window by selecting **Run** and then **Steady Flow Analysis**. It is shown in Figure 15.10.

First, the *Short ID* was entered as “Split Flow.” Next, the flow optimization flags were turned on. This was done by selecting **Options** and then **Split Flow Optimizations**. This activated the **Split Flow Optimization Editor** as shown in Figure 15.11. The tab for the lateral weir was selected by clicking on it. After clicking on it, the user can toggle between turning optimization on or off by pressing the <space bar> or by pressing “y” or “n.” If the optimization flag had been left off, the program would still calculate the flow over the lateral weir. However, this flow would not be removed from the river system (this will be discussed more later).

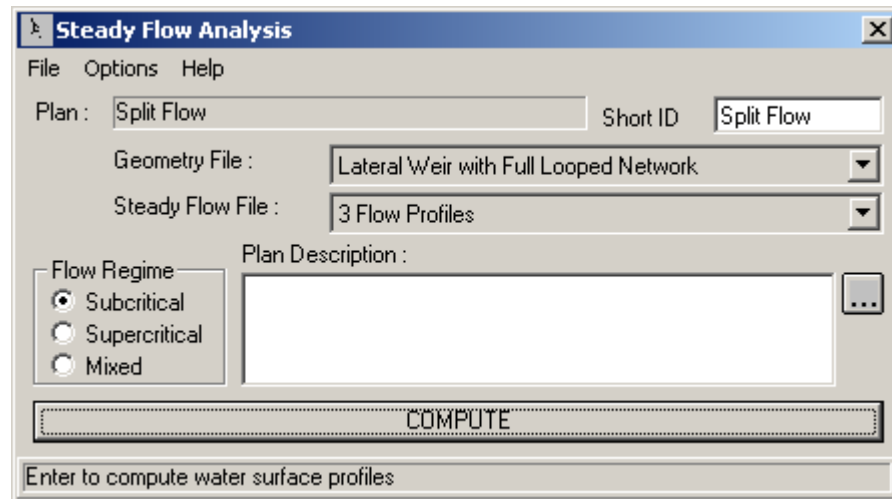


Figure 15.10 Steady Flow Analysis Editor


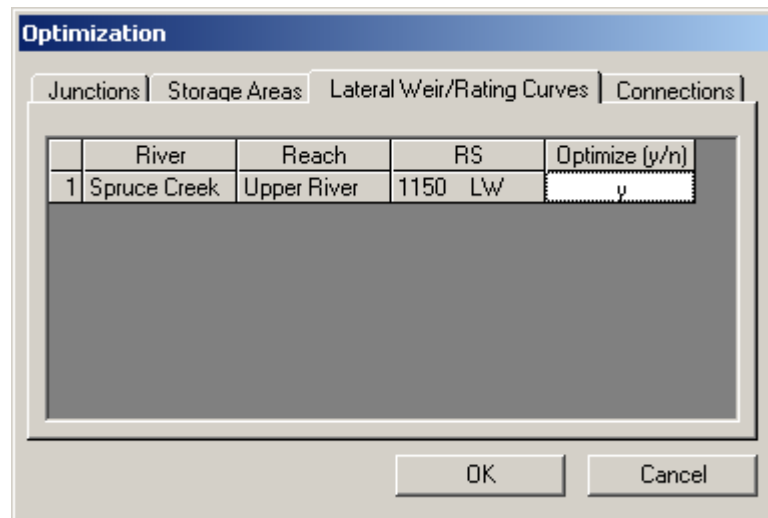


Figure 15.11 Optimization Data Editor for Lateral Weirs

Next, optimization for the junction was turned on. This was done by clicking on the *Junction* tab, which changes the **Optimization Editor** as shown in Figure 15.12. Optimization at the Meadows junction can then be toggled like it was for the lateral weir. Flow optimization can only be performed at junctions that have more than one downstream reach. For this reason, the **Editor** does not display the Pottsville junction. If the optimization flag at the Meadows junction had been left off, the program would not optimize the flow split. Rather, the program would maintain the same flow ratio in each reach.

For instance, assume that for the first profile, the junction optimization is off and that the upstream lateral weir has an outflow of 500 cfs. This means that there would be 1,000 cfs flowing into the Meadows junction instead of 1,500 cfs. The program would then proportionately reduce the flow in each reach.

Middle River would be 200 cfs (instead of 300 cfs) and Bryon Creek would be 800 cfs (instead of 1,200 cfs).

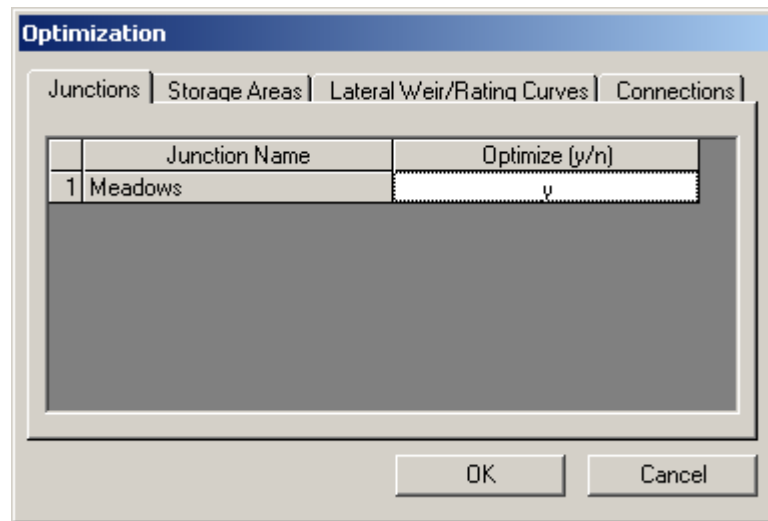

**Figure 15.12 Optimization Data Editor for Junctions**

Now that the optimization flags have been turned on, the files for this plan can be named and saved. First, the geometry file was selected as “Lateral Weir with Full Looped Network” and the flow file was “3 Flow Profiles.” Next, the *Flow Regime* was selected as “Subcritical.” Then, **File** and **Save Plan As** were chosen and the information was saved as the plan “Split Flow.” This plan name then appeared on the **Steady Flow Analysis Window**, as well as on the main program window. Finally, the **COMPUTE** button was clicked to perform the analysis.

## Output Analysis

For the analysis of the output, the water surface profiles, the lateral weir type cross-section table, the lateral weir only type profile table, the junctions table, and the standard profile table will be reviewed. Each of these is described in the following sections.

### Water Surface Profiles

The water surface profiles are shown in Figure 15.13. This figure was activated from the main program window by selecting **View** and then **Water Surface Profiles**. The figure shows all three of the flow profiles. It shows all three of the reaches that make up Spruce Creek, but it does not show the Bryon Creek reach. As can be seen from the figure, the lateral weir has no flow for the first profile, flow through just the gates for the second profile, and flow through the gates and over the weir for the third profile.

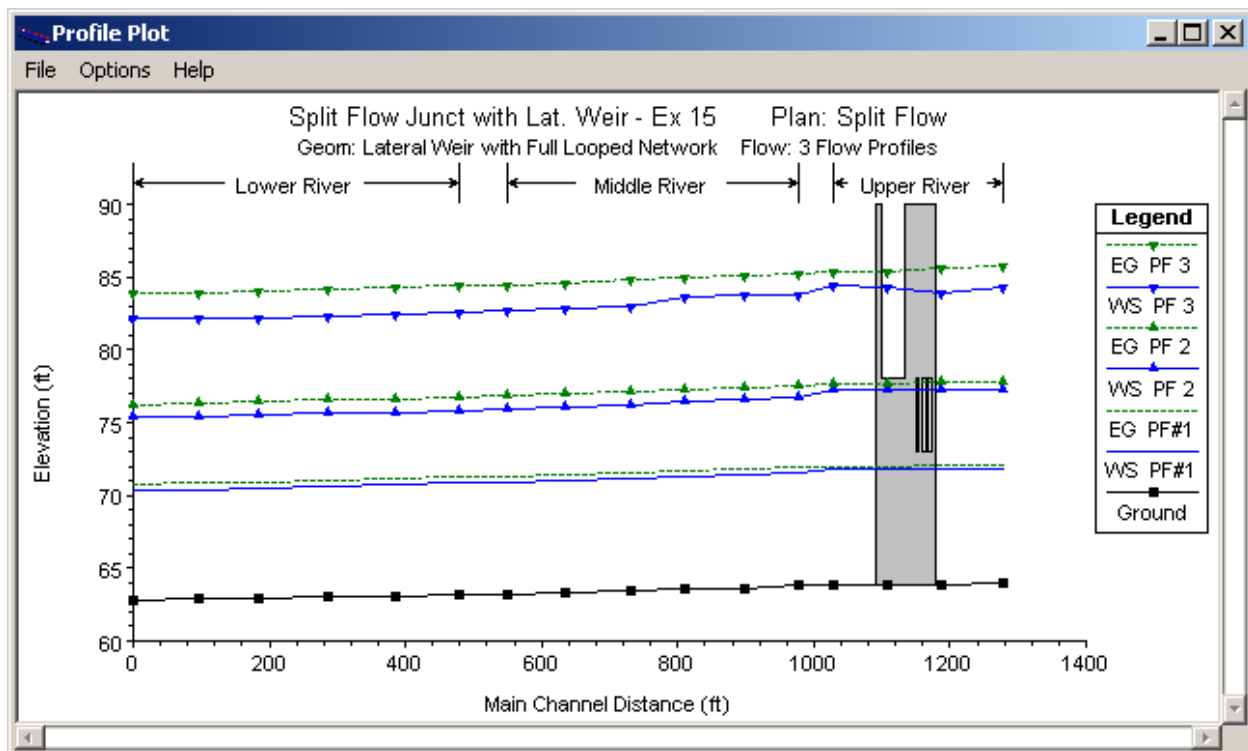


Figure 15.13 Water Surface Profiles for Spruce Creek

## Lateral Weir Detailed Output Table

To review the detailed hydraulic results for the lateral weir, the **Lateral Weir** type **Detailed Output Table** was activated and is shown in Figure 15.14. This table was activated from the main program window by selecting **View**, **Detailed Output Table**, **Type**, and then **Lateral Weir/Spillway**.

At the top of the table, *River* was selected as Spruce Creek, the *Reach* was selected as "Upper River" and the river station was 1150 (the node for the lateral weir). The profile was selected as "3."

The table shows the energy grade and water surface at the upstream and the downstream end of the weir. For this profile, the energy grade at the start of the lateral weir is 85.61 feet and 85.39 feet at the downstream end. The total flow upstream of the lateral weir is 15000 cfs. The total flow in the river downstream of the lateral weir is 11908 cfs (the lateral weir is spilling 3536 cfs or 23.6% of the flow). The program shows that the flow over the top of the weir is 2268 cfs and through the gates is 1268 cfs for a total of 3086 cfs.

In order to perform the backwater computations (and get the water surfaces and energies in the vicinity of the weir), the program must know the amount of flow in the river. To do this, it assumes the amount of flow that will be diverted by the lateral weir. This is based on the previous iteration (for this example, for the final iteration, a flow of 3092 cfs was assumed to be diverted). After the backwater calculations have been performed, the



Reach	River Sta	Q US (cfs)	Q Leaving Total (cfs)	Q DS (cfs)	Q Weir (cfs)	Total Gate Flow (cfs)	Weir Top Width (ft)	Weir Max Depth (ft)	Weir Avg Depth (ft)
Upper River	1150	1500.00	0.00	1500.00	0.00	0.00			
Upper River	1150	5000.00	390.06	4608.58	0.00	390.06			
Upper River	1150	15000.00	3086.46	11907.97	1885.06	1201.41	40.00	6.33	6.27

Figure 15.15 Lateral Weir Profile Table

## Junctions Profile Summary Table

The **Junctions Only Profile Table** is shown in Figure 15.16. This figure was activated from the main program window by selecting **View, Profile Summary Table, Std. Tables**, and then **Junctions**. The figure displays the water surface elevations, energy grade lines, and total flows for each river cross-section immediately bounding the junction. This table makes it easy to check if the split flow at the junction converged. (For a given profile, the energy grade lines for the cross sections just downstream of the junction should be approximately the same. The default tolerance for junctions is 0.02 feet). It also makes it easy to see how much flow is going into each reach.

Reach	River Sta	W.S. Elev (ft)	E.G. Elev (ft)	Q Total (cfs)
Upper River	1028.	71.77	71.96	1500.00
Upper River	1028.	77.23	77.65	4608.58
Upper River	1028.	84.45	85.30	11907.97
Junction:	Meadows			
Bryon Creek	639.	71.41	71.90	1050.99
Bryon Creek	639.	76.52	77.56	3164.55
Bryon Creek	639.	83.38	85.17	7850.87
Middle River	978.	71.52	71.92	449.01
Middle River	978.	76.71	77.56	1444.03
Middle River	978.	83.82	85.16	4057.11

Total flow in cross section.

Figure 15.16 Junctions Profile Table



## Standard Profile Summary Table

The **Standard Table 1** is shown in Figure 15.17. This figure was activated from the main program window by selecting **View, Profile Summary Table, Std. Tables**, and then **Standard Table 1**. For this table, only the third profile is being displayed. The flow at river station 1188, upstream of the lateral weir, is 15000 cfs. The flows at river stations 1108 and 1028 are 12384 cfs and 11908 cfs. This represents the flow diverted by the lateral weir. River station 1108 intersects the middle of the lateral weir. So for the third profile, part of the flow is diverted between river stations 1188 and 1108 and the rest is diverted between 1108 and 1028. Note also the 500 cfs increase in flow between river station 810 and 730 (from 4057 cfs to 4557 cfs) in the Middle River reach. This represents the 500 cfs inflow tributary (the tributary is not shown on the river schematic). In the **Steady Flow Editor**, the flow at river station 730 was entered as 4500 cfs for the third profile. However, due to the flow diversion from the lateral weir and the flow split at the Meadows junction, the flow in the Middle River is not constant. In this situation, the program will keep track of the relative flow change. The 4500 cfs at river station 730 is 500 cfs greater than the 4000 cfs flow at the start of the Middle River reach. Hence, the program adds 500 cfs flow at this river location.

Profile Output Table - Standard Table 1											
HEC-RAS Plan: Split Flow Profile: PF 3											
Reach	River Sta	Q Total (cfs)	Min Ch El (ft)	W.S. Elev (ft)	Crit W.S. (ft)	E.G. Elev (ft)	E.G. Slope (ft/ft)	Vel Chnl (ft/s)	Flow Area (sq ft)	Top Width (ft)	Frc
Upper River	1278.	15000.00	64.00	84.33		85.74	0.000676	9.82	1695.63	120.30	
Upper River	1188.	15000.00	63.80	83.96		85.64	0.000824	10.69	1551.89	107.00	
Upper River	1150	Lat. Weir									
Upper River	1108.	12383.53	63.80	84.32		85.41	0.000523	8.63	1590.11	107.00	
Upper River	1028.	11907.97	63.80	84.45		85.30	0.000400	7.65	1731.58	120.50	
Middle River	978.	4057.11	63.80	83.82		85.16	0.001262	9.86	500.24	55.22	
Middle River	898.	4057.11	63.63	83.74		85.06	0.001224	9.76	505.15	55.91	
Middle River	810.	4057.11	63.54	83.66		84.95	0.001176	9.64	510.79	56.58	
Middle River	730.	4557.11	63.41	83.00		84.78	0.001673	11.29	483.57	54.45	
Middle River	635.	4557.11	63.28	82.85		84.62	0.001643	11.23	484.53	54.79	
Middle River	550.	4557.11	63.15	82.73		84.48	0.001589	11.11	488.11	54.49	
Lower River	480.	12407.97	63.12	82.51		84.38	0.001102	11.04	1177.11	99.85	
Lower River	385.	12407.97	63.06	82.41		84.28	0.001107	11.04	1174.39	99.78	
Lower River	285.	12407.97	62.99	82.32		84.18	0.001098	11.00	1177.12	99.83	
Lower River	185.	12407.97	62.93	82.23		84.06	0.001082	10.92	1183.31	99.86	
Lower River	95.	12407.97	62.86	82.17		83.96	0.001046	10.78	1197.22	99.93	
Lower River	0.	12407.97	62.80	82.13	76.43	83.85	0.001000	10.59	1216.07	100.10	

Figure 15.17 Profile Standard Table 1

## Additional Adjustments


Now that the data have been entered and the program has been run, adjustments can be made to the initial flow split assumptions. Making adjustments can reduce the number of iterations that the program requires and hence speed up the computer run. This will usually be true even if other modifications are being made to the geometry file (e.g. a bridge is being added to one of the river reaches). In some cases, a data set that is not converging can be modified to one that will converge.

### Junction Flow Split

Figure 15.16. above, shows the flow split at the Meadows junction. For the third profile, Middle River has 4057 cfs and Bryon Creek has 7851 cfs. The 4057 cfs is around 34% of the total flow at the Meadows junction. However, the original data, in the **Steady Flow Editor**, shows that Middle River has 4000, which is around 25% of the original 15000 cfs flow at Meadows (Bryon Creek has the remaining 11000 cfs). Adjusting this flow to be closer to 34% of the total will speed up the convergence process. In this case a value of 5000 cfs for Middle River and 10000 cfs for Bryon Creek would improve the run time (and increase the chances of successful convergence). Note that it would be incorrect to simply enter the 4057 cfs for Middle River and 7851 cfs for Bryon Creek in the **Steady Flow Editor**. If this were done, then the program would assume that a flow loss was taking place at the Meadows junction. Note also that if the flow in the Middle River is changed to 5000, then the flow at 730 should be changed to 5500 to maintain the 500 cfs increment.

### Lateral Weir Flow Split

The user can also enter a first guess for the amount of flow that will be diverted by the lateral weir. As in the case of a junction, this can improve the run performance. To enter this data, from the **Steady Flow Data Editor**, **Options** and then **Initial Split Flow Values** were selected. This activated the **Initial Lateral Flow Splits Editor** as shown in Figure 15.18. By clicking under the *Initial Flow* field for the appropriate profile, a first guess for the lateral weir flow can be entered. The program will then assume that this much flow is diverted when it performs the first iteration of the backwater calculations.

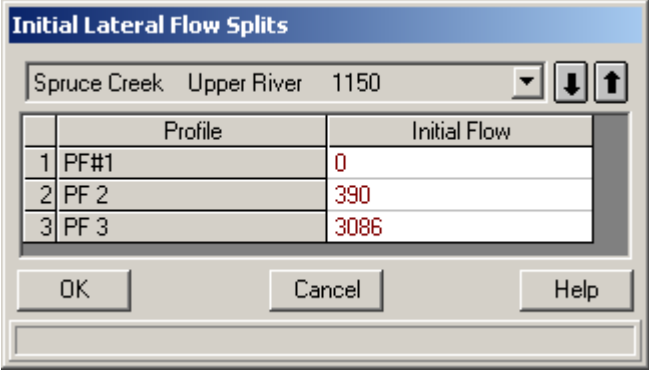

The dialog box titled "Initial Lateral Flow Splits" contains a text field with "Spruce Creek", "Upper River", and "1150". To the right of the text field are three buttons: a dropdown arrow, a down arrow, and an up arrow. Below the text field is a table with two columns: "Profile" and "Initial Flow". The table has three rows: "1 PF#1" with "0", "2 PF 2" with "390", and "3 PF 3" with "3086". At the bottom of the dialog are three buttons: "OK", "Cancel", and "Help".

	Profile	Initial Flow
1	PF#1	0
2	PF 2	390
3	PF 3	3086

Figure 15.18 Initial Lateral Flow Split Data Editor

## Summary

This example computed 3 flow profiles for the Bryon Creek and Spruce Rivers. It included a lateral weir with gates and a fully looped river network between the Meadows and Pottsville junction.

By reviewing the lateral weir and junction tables and the water surface profiles and tables, the user can determine the amount of flow being diverted by the lateral weir and the amount of flow being split into the two reaches downstream of the Meadows junction. The **Lateral Weir/Spillway Output** table provides detailed output for the lateral weir, for a given profile. The **Junctions** table provides flow split output for one or more profiles. The user can also adjust the initial starting conditions to improve the run performance of the computer computations.